


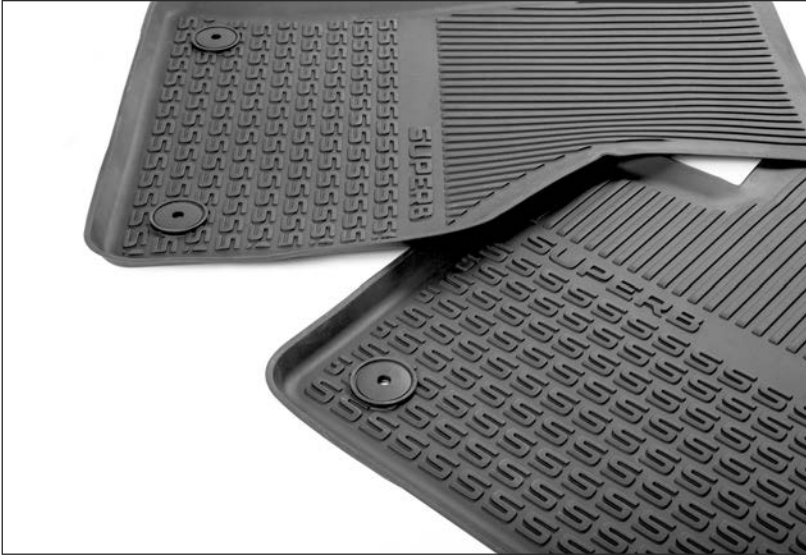

## Front rubber foot mats



**3V1 061 551**

ŠKODA Superb (3V)

**Material:** TPE (Thermoplastic Elastomer)

**Colour:** Black

### Quality material | Practicality | Extensive tests

The front inserted foot mats are made of **quality TPE plastic** specifically for ŠKODA Superb. They come in handy especially **during winter season** when the car's interior suffers the most. Thanks to their accurate shape, they completely fill the shape under the passengers' feet. Featuring the signature Superb lettering, the front mats are attached to the floor by skims that fix them in place. They **entrap dirt** and humidity, and their **surface is** easy to clean and **not slippery**. The main advantage of these mats is their raised edge that prevents the dirt from getting off the mat while also withholding any water (e.g. thawed snow). Thanks to the raised edge, the mat can be easily removed without having the dirt fall off into the car. Durable and mechanically **resistant**, the mats are easily maintained clean using common soap agents. When replacing the mats, it is necessary first to remove the old mats and then insert the new ones. It is not allowed to stack the mats on top of each other.

**Fitting time:** 20 TU

**Contents of the kit:** 2 front foot mats with a Superb lettering, installation manual

**Fitting:** The mats are attached by latching the hardened skims onto the floor pins

**Maintenance:** Standard soap-based cleaning agents. Don't use abrasive cleaning agents and solvents.

**Restrictions:** Only for cars with left hand steering

**Warranty:** 24 months (does not apply regular wearing)

**Weight:** 2.3 kg

#### Related Products:

Rear rubber mats /

3V0 061 551

Rubber mat over tunnel /

3V0 061 580

Textile foot mats Standard

(for summertime driving) /

3V1 061 404B

Textile foot mats Prestige

(for summertime driving) /

3V1 061 404

Textile foot mats Prestige - Colour packet

(for summertime driving) /

3V1 061 404A

COMFORT  
AND UTILITY